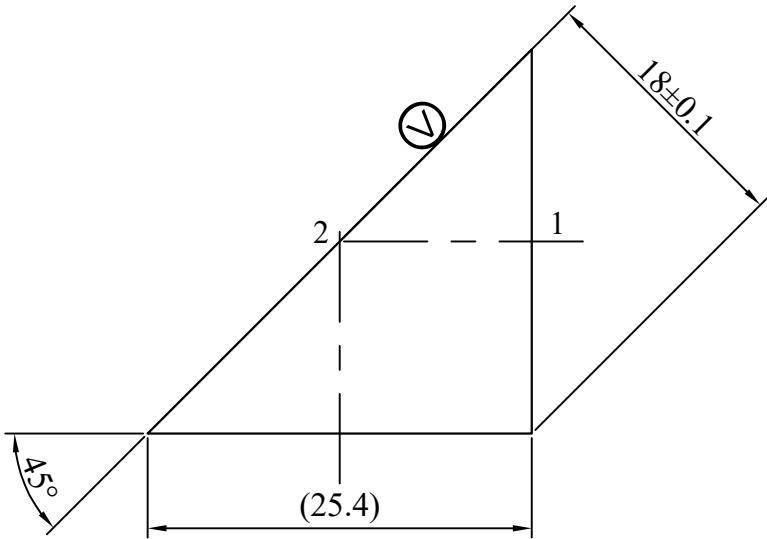


修饰处理与热处理										表面光洁度		
										其余 0.008/√		
对材料的要求	ΔnD		1C									
	Δ(R-nC)		1C									
	均匀性		1									
	双折射		1									
	光吸收系数		3									
	条 纹		1C									
	气 泡		0A									
对零件的要求	N ₁		2									
	ΔN ₁		0.4									
	N ₂		2									
	ΔN ₂		0.4									
	倒二面角		0.3±0.1									
	倒三面角		0.5±0.2									
	D ₀₁		Ø22.8									
	D ₀₂		Ø25.2×22.8									
	B		III									
	⊖		±3'									
对镀膜的要求	种 类		⊙									
	峰值波长											
	波 段											
	I											
	R											
技术要求												
1. ⊙ JB/T8226.3-1999, 外反射膜, 介质膜, 波长范围: 750-1100nm, 45°角入射, Ravg>99%, 要求边缘整齐, 不应有膜欠。												
2.材料要经过消应力回火处理。												
责任	签 字											
描 图												
描 校												
								名	称	图 纸 编 号	比 例	
旧底图总号	标记	处数	更改依据	签 名	日 期	750-1100nm介质膜直角反射棱镜				PR-A080022	2:1	
		设 计				材 料				数 量	重 量	
底图总号		制 图				H-K9L						
		检 图				所 属 装 配 图 号				共 张	第 张	
		描 图										
日期	签名	会 签								OMTOOLS		
		标 准										
		批 准										